


ProLoop Lite


Loop detector for industrial doors and gates and car parks

Translation of the original instruction

General

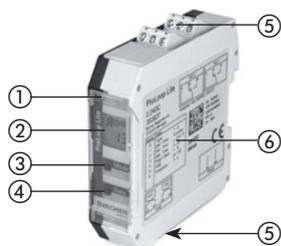

- ① Information – light emitting diode
- ② LCD display
- ③ "Mode" key
- ④ "Data" key
- ⑤ Connecting terminals
- ⑥ Type plate

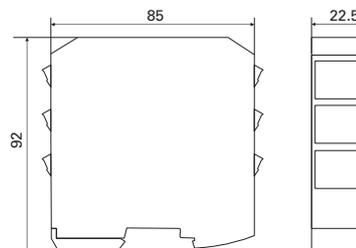

1 Safety instructions

- ⚠ – These devices and their accessories may only be operated in accordance with the operating instructions (intended use).
- These devices and their accessories may only be placed in operation by trained and qualified personnel.
- These devices may only be operated with the operating voltages and parameters intended for them.
- If malfunctions occur that cannot be eliminated, place the device out of operation and send it in for repair.
- These devices may only be repaired by the manufacturer. Tampering and alterations are not permitted. This will invalidate all guarantee and warranty claims.

2 Mechanical mounting in the switch cabinet

The ProLoop Lite is mounted in the switch cabinet on a 35 mm H-rail in accordance with EN 50022. The terminals can be plugged in and coded.

3 Connect electrical equipment

- ⓘ The loop connection wiring to a loop detector must be twisted at least 20 times per meter. Please wire the device according to the wiring diagram. Ensure correct assignment of the terminals and that the power supply is right in accordance with the type plate on the device.

3.1 Terminal connection diagram

Power supply	Loop connection 1-channel device	Loop connection 2-channel device	Output 1	Output 2


4 Value and parameter setting options

General

The settings of the ProLoop Lite devices in this chapter are depicted and explained using the 1-loop device. The settings for loop 2 of a 2-loop device should be made using the corresponding method.

4.1 Value and parameter setting options

Standard display 1-loop device	Standard display 2-loop device

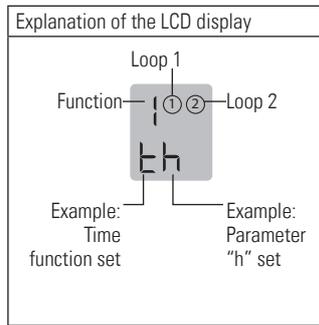

Explanation of the LEDs

Info	
Red + Green	Start-up phase configuration
Green	Operation
Green flashing	Output 1 or / and 2 activated
Flashing red	Error

4.2 Basic functions of output relay status \bar{D} (setting, see table 4.8)

Parameter		Loop unactivated	Loop activated	Fault
1	Door and gate			
2	Barrier			
3	Quiescent current			

4.3 Time functions $\bar{1}$, time unit $\bar{2}$ and time factor $\bar{3}$ (settings, see table 4.8)

Activation of the loop pulls the relay on; the relay drops off when the loop is exited. t = typically ms or s		Switch-on delay: When the loop is activated, the relay is pulled on after the time t and drops off when the loop is exited. t = typically ms or s		Switch-off delay: When the loop is activated, the relay is pulled on drops off after time t after the loop is exited. t = typically ms or s	
Activation pulse: When the loop is activated, the relay is pulled on and drops back off after time t. t = typically ms or s		Exit pulse: When the loop is exited, the relay is pulled on and drops back off after time t. t = typically ms or s		Maximum presence: When the loop is activated, the relay is pulled on and drops back off when exited, but not later than after time t. t = typically ms or s	

4.4 Sensitivity $\bar{4}$ (setting, see table 4.8)

The sensitivity $\bar{5}$ of the loop detector can be adjusted in 9 steps:

$\bar{5}1$ = lowest sensitivity (→ much metal, low recognition distance)	$\bar{5}9$ = highest sensitivity (→ little metal, large recognition distance)	$\bar{5}4$ = factory setting
---	--	------------------------------

4.5 Automatic sensitivity boost ASB $\bar{5}$ (setting, see table 4.8)

ASB (= **A**utomatic **S**ensitivity **B**oost).

ASB is required in order to be able to detect trailer drawbars after activation.

4.6 Frequency $\bar{5}$ (setting, see table 4.8)

Four different frequencies F1, F2, F3 and F4 can be set. This helps to prevent crosstalk with adjacent loops. Factory setting: F4.

4.7 Switching from operating to configuration mode

1-loop device

Display after start-up:		Touch the «Mode» button once to change to configuration mode		
-------------------------	--	--	--	--

2-loop device

Display after start-up:		Touch the «Mode» button once to change to configuration mode			① Loop 1 is selected			② Loop 2 is selected
-------------------------	--	--	--	--	----------------------	--	--	----------------------

(Back to automatic mode: Press and hold Mode button > 1 second)

4.8 Configuration mode

Note on 2-loop device: For each function after Loop 1 is set, the parameters of Loop 2 are set (perform settings similarly).

Table Settings

Function	LCD Display	Button operation functions	Button operation parameter
0			
Operating mode	A 11		Operating mode
1			
Basic function	0 1		Door and gate*
2			
Time function	1 h		Barrier
3			
Time unit	2 c		Switch-on delay
4			
Time factor	3 l		Switch-off delay
5			
Sensitivity	4 4		Quiescent current
6			
Automatic sensitivity boost ASB	5 A0		Switch-off delay
7			
Frequency	6 F4		Switch-on delay
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			
25			
26			
27			
28			
29			
30			
31			
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			
49			
50			
51			
52			
53			
54			
55			
56			
57			
58			
59			
60			
61			
62			
63			
64			
65			
66			
67			
68			
69			
70			
71			
72			
73			
74			
75			
76			
77			
78			
79			
80			
81			
82			
83			
84			
85			
86			
87			
88			
89			
90			
91			
92			
93			
94			
95			
96			
97			
98			
99			
100			
101			
102			
103			
104			
105			
106			
107			
108			
109			
110			
111			
112			
113			
114			
115			
116			
117			
118			
119			
120			
121			
122			
123			
124			
125			
126			
127			
128			
129			
130			
131			
132			
133			
134			
135			
136			
137			
138			
139			
140			
141			
142			
143			
144			
145			
146			
147			
148			
149			
150			
151			
152			
153			
154			
155			
156			
157			
158			
159			
160			
161			
162			
163			
164			
165			
166			
167			
168			
169			
170			
171			
172			
173			
174			
175			
176			
177			
178			
179			
180			
181			
182			
183			
184			
185			
186			
187			
188			
189			
190			
191			
192			
193			
194			
195			
196			
197			
198			
199			
200			
201			
202			
203			
204			
205			
206			
207			
208			
209			
210			
211			
212			
213			
214			
215			
216			
217			
218			
219			
220			
221			
222			
223			
224			
225			
226			
227			
228			
229			
230			
231			
232			
233			
234			
235			
236			
237			
238			
239			
240			
241			
242			
243			
244			
245			

5 Error display

E

When an error occurs, the operating mode "A" and the error display "E" are shown alternately. The LED changes to flashing red.

6 Reset



2 seconds

Reset 1 (recalibration)

The loop(s) is/are recalibrated.

7 Technical data

Power supply voltage/ power consumption	24 VDC 24 VDC -10% to +20%, max. 1.5 W 230 VAC 230 VAC ± 10%, 50 Hz, max. 2.9 VA
Loop inductiveness	Max. 20 to 1000 µH Ideally 80 to 300 µH
Loop power line	For 20-40 µH: max. 100 m with 1.5 mm ² For >40 µH max. 200 m with 1.5 mm ² Min. twisting 20 times per metre
Loop resistance	< 8 ohms with connection wire
Output relay (loop)	Max. 240 VAC; 2 A / 30 VDC; 1 A; AC-1

Dimensions	22.5 x 92 x 85 mm (W x H x D)
Housing mounting	Direct DIN rail mounting
Connection type	Screw-in terminals
Protection class	IP 20
Operating temperature	-20°C to +60°C
Storage temperature	-40°C to +70°C
Air humidity	< 95% non-condensing

8 EC Declaration of Conformity

Manufacturer: Bircher Reglomat AG, Wiesengasse 20, CH-8222 Beringen
Following directives have been observed: RoHS 2011/65/EU, RED 2014/53/EU
Product variants: ProLoop Lite 1.x, ProLoop Lite 2.x

9 Contact

Danish seller:

Bircher Reglomat AG
Wiesengasse 20
CH-8222 Beringen
www.bircher-reglomat.com

Swissdoor ApS
Stenhuggervej 2
DK-5471 Soendersoe
Denmark
Tel.: +45 86 28 00 00
mail@swissdoor.dk
www.swissdoor.dk